


Safty-Trol Valve Cartridge/Stem & Plate Assembly

9975-030-001

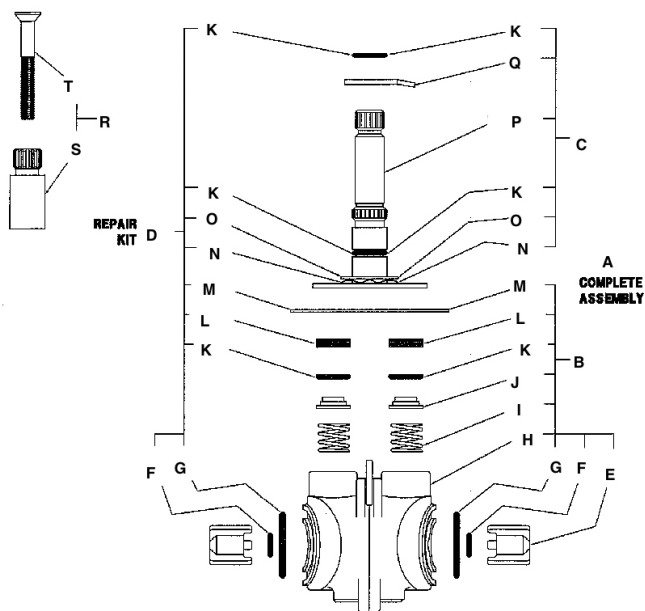

A	99102109	Safty-Trol Cartridge w/Stem
	99102110	Safty-Trol Cartridge w/Ext
B	99102123	Safty-Trol Balance Cartridge
C	99280056	Stem 2-1/2"
	99063053	Stem Assembly 3-3/8"
D	99102117	Safty-Trol Cartridge O-Ring & Gasket Repair Kit
E	99102111	Pop Valve Cap (PK/10)
F	00204	7/32" X 11/32" X 1/16" O-Ring
G	00214	3/4" ID X 15/16" OD X 3/32" O-Ring
H	99102112	Safty-Trol Cartridge Assembly
I	99102113	Safty-Trol Cartridge Spring (PK/10)
J	99102114	Safty-Trol Cartridge Spring & Retainer Disk
K	00207	3/8" X 1/2" X 1/16" O-Ring
L	99102115	Gasket (PK/10)
M	99102116	Gasket (PK/10)
N	99102118	Copper w/Heat Treat Thrust (PK/10)
O	99102119	Phenolic/Linen Washer (PK/10)
P	99102120	Safty-Trol Stem & Plate Assembly Standard
Q	99102121	Safty-Trol Stem & Plate Assembly 3-5/16"
R	99102122	Safty-Trol Temperature Limit
S	99113377	Stem Extension
T	99287373	10-32 X 1-1/2" Flat HD Allen Screw (PK/10)