


## Sloan

### Sloan Basys EFX-300 Series

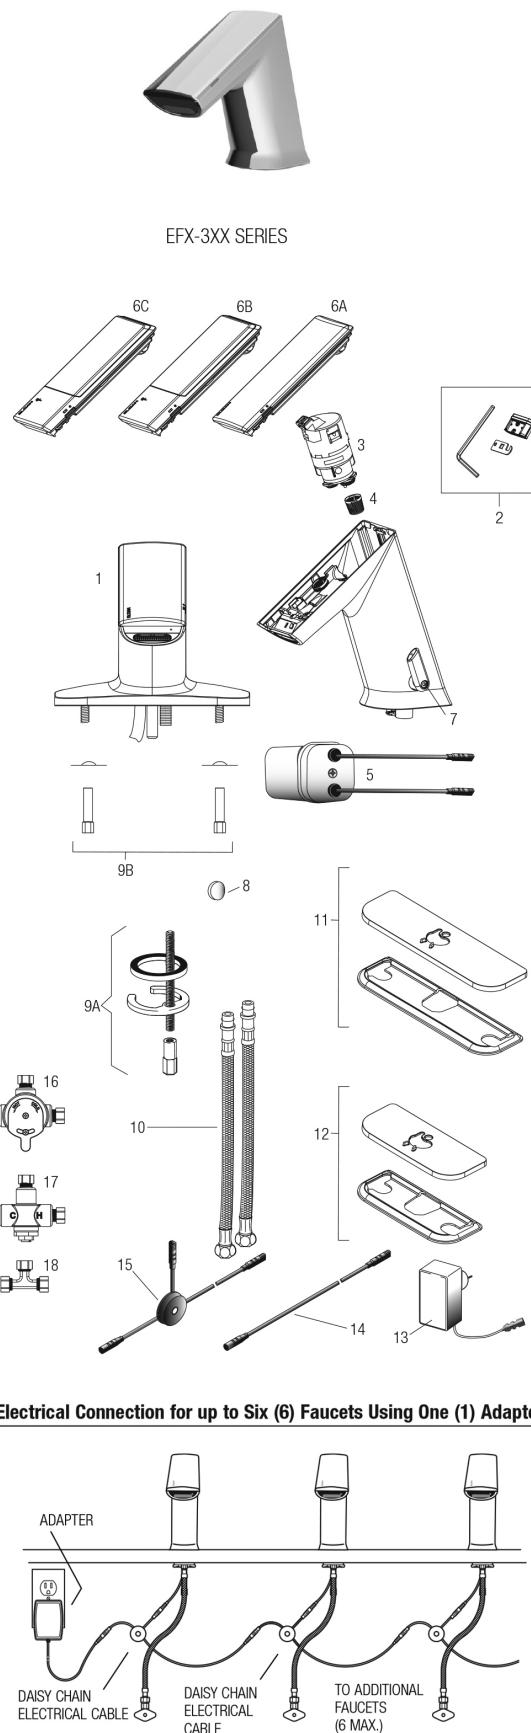

|    |          |   |
|----|----------|---|
| 1  | 99860024 | Hardwired, Chrome BASYS Faucet                      |
| 2  | 99651049 | 0.5 GPM Multi-Lam Spray Head                        |
|    | 99860025 | 1.5 GPM Aerated Stream Insert                       |
|    | 99860026 | 1.5 GPM Laminar Stream Insert                       |
|    |          | 0.5 GPM Solenoid Valve Caddy Assembly               |
| 3  | 99523850 | Low<br>(Green)                                      |
|    | 99524098 | 1.5 GPM Solenoid Valve Caddy Assembly<br>Low (Blue) |
| 4  | 99811302 | Strainer (Filter) (PK/10)                           |
| 5  | 99122677 | Battery Pack Assembly                               |
| 6A | 99811303 | Crown Assembly                                      |
| 6B | 99590498 | Solar Crown Assembly                                |
| 6C | 99811304 | Solar Crown w/ LCD Assembly                         |
| 8  | 99710252 | Handle Cap (EFX IR models only)                     |
| 9A | 99330459 | Faucet Mounting Kit (pedestal model only)           |
| 9B | 99811313 | Faucet Mounting Kit (integrated base model<br>only) |
| 10 | 99271632 | 13" Flexible Supply Hose                            |
| 11 | 99452772 | Trim Plate for 8" Centerset Sink (CP)               |
| 12 | 99700041 | Trim Plate for 4" Centerset Sink                    |
| 13 | 99330475 | Plug-In Adapter                                     |
|    | 88093279 | Box Mount 6 VDC Optima i.q® Faucet                  |
| 14 | 88093276 | 11-13/16" Extension Cable                           |
|    | 88093277 | 47-1/4" Extension Cable                             |
|    | 99289405 | 10ft Extension Cable                                |
| 15 | 99317485 | Power Splitter                                      |
| 16 | 99013370 | Mechanical Below Deck Mixing Valve                  |
| 17 | 99042986 | Thermostatic Below Deck Mixing Valve                |
| 18 | 99082170 | Back-Check Tee Assembly                             |

#### TROUBLESHOOTING GUIDE

##### 1. Red LED in spout does not blink 2 seconds after battery installation.

- A. Battery placement incorrect or batteries have been discharged.
- B. Ensure batteries are installed properly. Check the orientation of each battery matches the positive (+) and negative (-) symbols shown on the battery compartment.

##### 2. Faucet DOES NOT deliver any water when sensor is activated.

INDICATOR: Solenoid valve produces an audible "CLICK".

- A. Water supply stop(s) closed.  
Open water supply stop(s).
- B. Strainer is clogged.  
Remove, clean, and reinstall strainer. Replace strainer, if needed (refer to page 131).

##### 3. Solenoid valve DOES NOT produce an audible "CLICK".

- A. Batteries low (battery powered models).  
Replace batteries (refer to battery replacement on page 130).
- B. Power failure (hardwire models). Check power supply.

##### 4. LED indicator blinks RED when faucet is in use.

- A. Batteries low (battery powered models).  
Replace batteries (refer to battery replacement on page 132).