 


Replacement Parts for Adjustable Wall Faucets



Installation Instructions for Adjustable Wall Faucets

BE SURE TO CHECK WITH YOUR LOCAL DEPARTMENT HAVING JURISDICTION REGARDING BACKFLOW PREVENTION

Installation Notes:

- Be sure to shut off water supply before beginning.
- Use pipe thread sealant such as PST on all threaded joints.
- Check the packaging for missing items BEFORE beginning installation. If items are missing, contact your supplier.


Tools Required for Installation

- Medium Sized Crescent Wrench
- Pipe Thread Sealant



Package Contents

The box should contain the following:

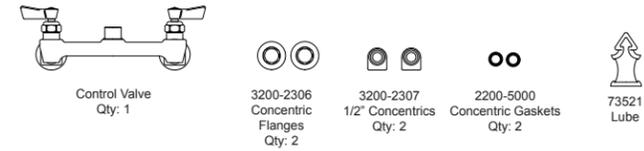



Installation Instructions

Step 1.

After unpacking items and checking for missing components, insert and center the gasket into the female swivel inlets of the 8" control valve body. Loosely mount the eccentrics and flange onto the control valve body.

Step 2.

Mount control valve body to either a wall with a male supply nipples, or backsplash with nipples (not included). Be sure to use pipe thread sealant on the supply nipple threads. Adjust the eccentrics as needed in order to mount the control valve level. Once level, tighten the eccentrics

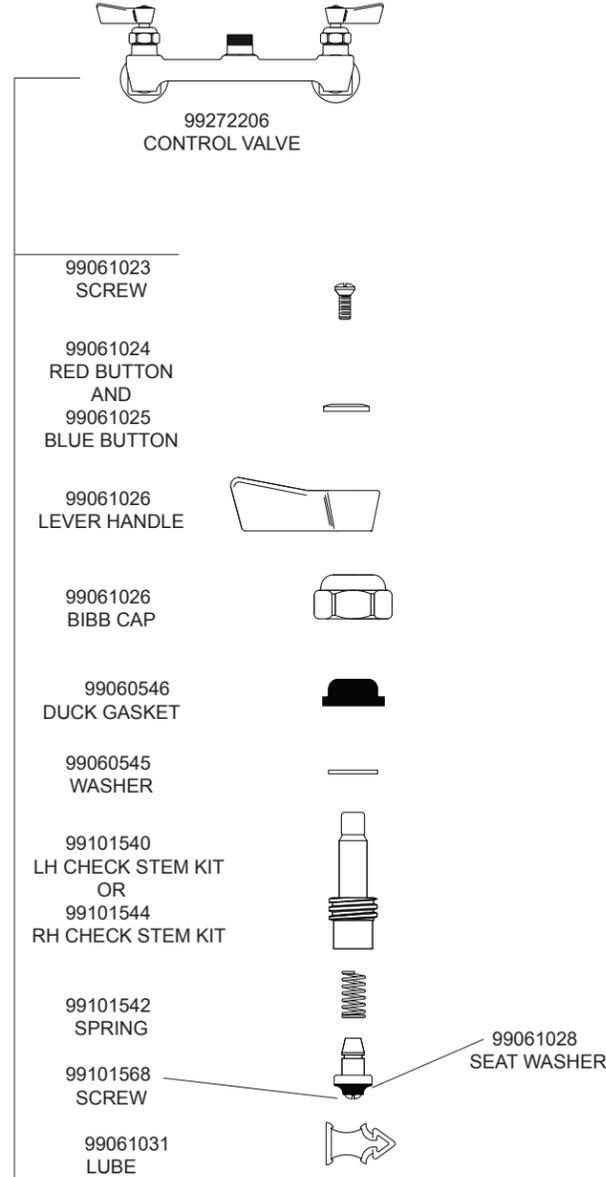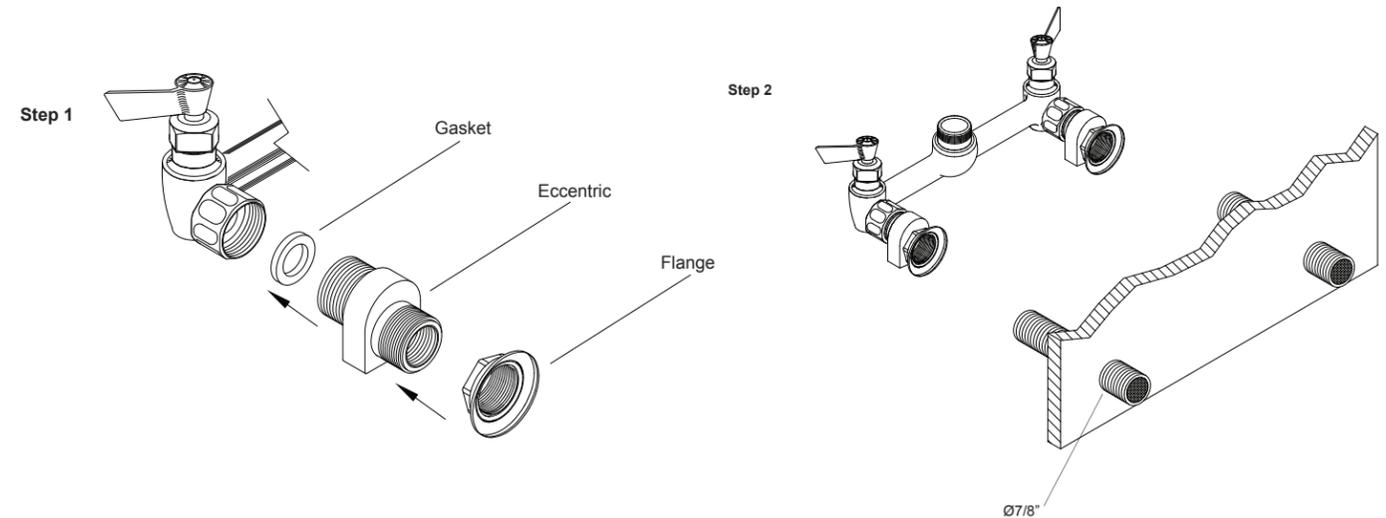

99101547 RH SWIVEL STEM REPAIR KIT OR 99101548 LH SWIVEL STEM REPAIR KIT

2000-0004 RH CHECK STEM REPAIR KIT OR 2000-0005 LH CHECK STEM REPAIR KIT



BEST PLUMBING SPECIALTIES

Ph: 800-448-6710 | www.bestplumbingspecialties.com