


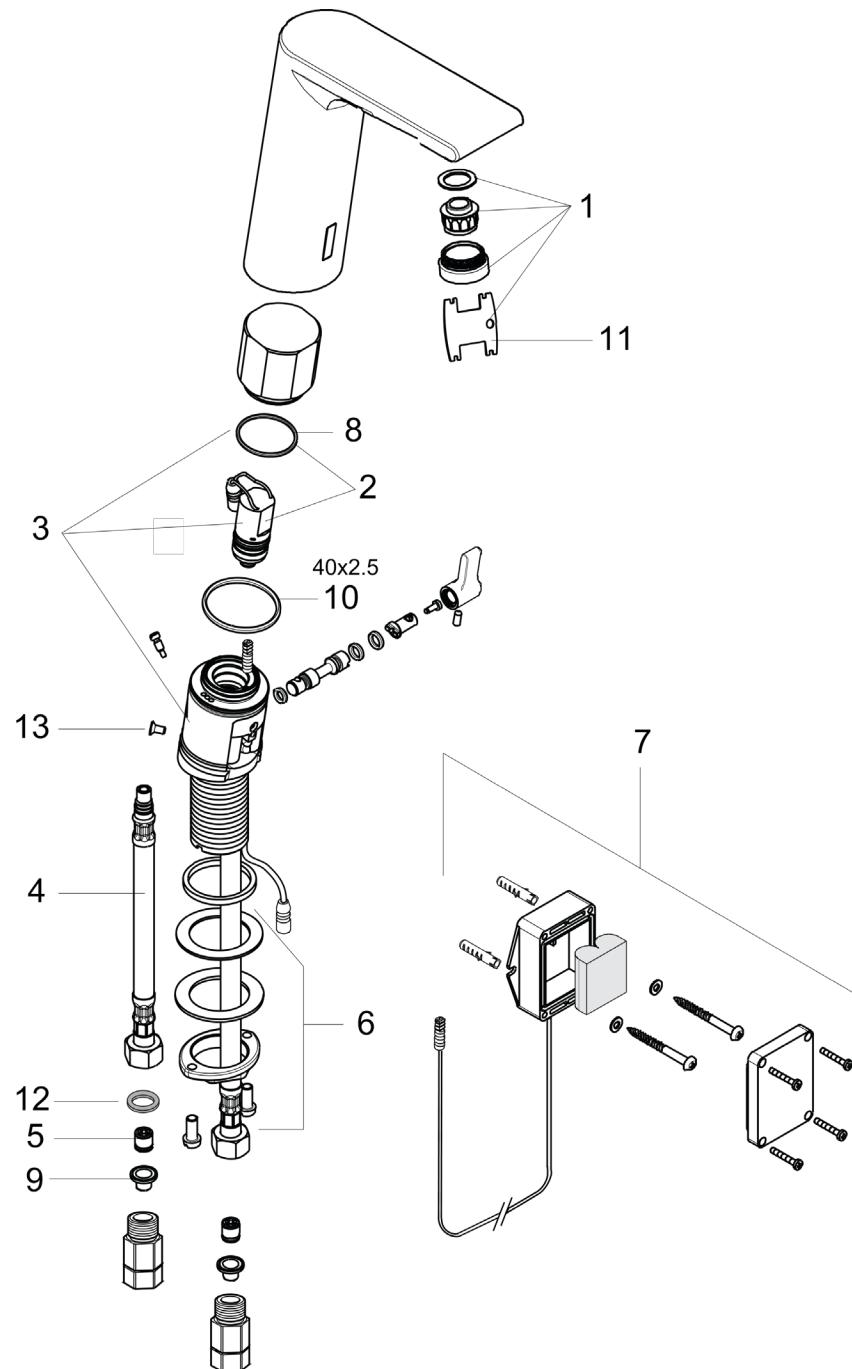

Exploded Drawing

Year of production: 08/11 - 05/14



Spare part list

Year of production: 08/11 - 05/14

Pos.	Description	Article Number	PC	PU
1	aerator M24x1 (5 l/min)	99818886	10	1
2	solenoid valve	99816699	16	1
3	electronics incl. solenoid valve	99818883	21	1
4	connection hose 450 mm M8x0,75 G3/8	99523844	10	1
5	non return valve DW 10	99454151	3	1
6	fixing set (Ø 32)	99811535	7	1
7	battery box	99816700	10	1
8	O-ring 31x2	-----	2	1
9	filter packing	99818887	4	1
10	lever collar	99816702	1	1
11	service tool	-----	5	1
12	sealing set	-----	2	1
13	screw	-----	1	1
a	fixation extension 35 mm	99811540	12	1

Troubleshooting

Problem	Possible Cause	Solution
The LED flashes while the faucet is running	- The battery is low, but is still usable	- No immediate action is necessary, but prepare to replace the battery.
The LED lights continuously and the faucet does not run	- The battery is dead	- Replace the battery
The LED flashes while the faucet is turned off	- The faucet is in reduced range mode	- Normal operation, not a problem
The water stream is unattractive	- The faucet has recently been installed or serviced	- No action needed: the stream will clear after several uses
The flow of water reduces over time	- Debris in the filters	- Follow the cleaning procedure
Model 12171xx1: The water is not warm enough or is too warm	- The handle has not been justified	- Justify the handle
Model 12172xx1: The water is not warm enough or is too warm	- The temperature must be set	- Set the temperature
Hot water bleeds into the cold supply or vice versa	- The check valve(s) is dirty or worn	- Replace the check valve(s) (item 96456000 on the parts sheet).
	- Water droplets on sensor window	- Dry the sensor window
The faucet turns on unexpectedly	- The lavatory is small or is highly reflective	- Reduce the sensor range
	- A strong light source shines directly on the sensor window	- Block the light source
	- The solenoid is dirty or worn.	- Replace the solenoid.

