


Parts Breakdown

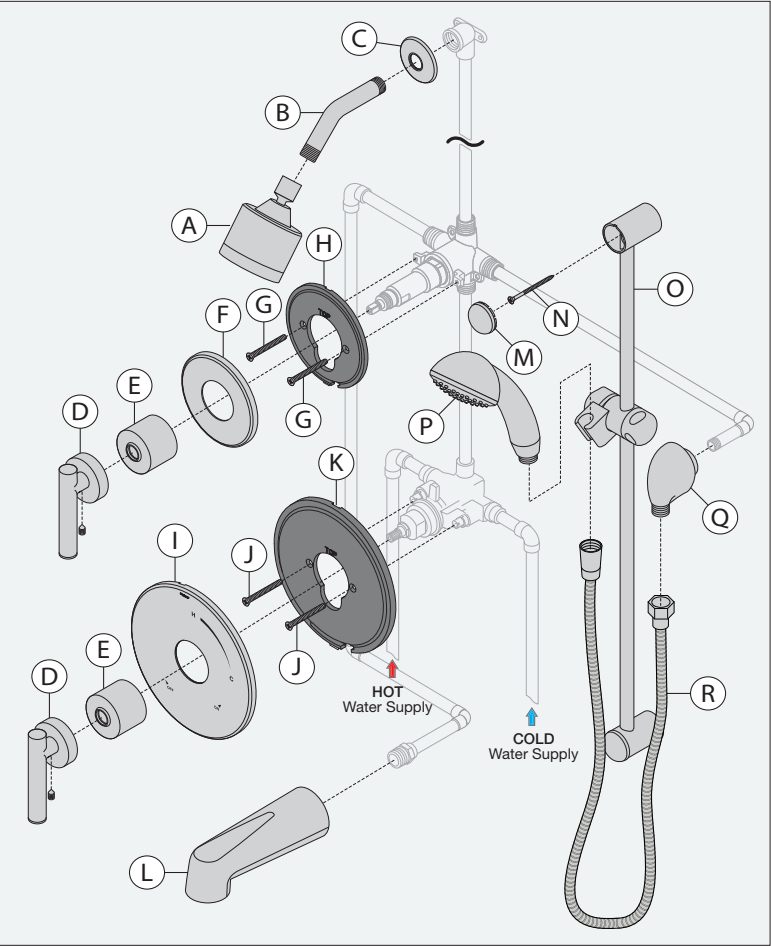

- Notes:**
- 1) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall. Leave opening on bottom of escutcheons for weep hole.
 - 2) Apply plumber tape to all threaded connections.



*Order in-line vacuum breaker (EF-109) for hand shower systems without dual checks.

Replacement Parts		
Item	Description	Part Number
A	Showerhead	99722410
B	Shower Arm	99010477
C	Flange	
D	Handle Assembly	99525410
E	Dome Cover	29854
F	Diverter Escutcheon	
G	Screws	99530407
H	Mounting Plate	
I	Escutcheon Screws	99825411 (Brass)
J	Mounting Plate	99773471 (Plastic)
K	Tub Spout	99250417
L	Slide Bar Assembly	
M	Hand Shower	99381194
N	Wall Elbow	99812002
O	60" Hose	99910690

- Notes:**
- 1) Append appropriate -suffix for premium finish.
 - 2) Append -1.5 or -2.0 to showerhead or hand shower for low flow.

Tools Required for Installation	
Adjustable wrench	
Allen wrench: Handle (2mm)	
Phillips head screwdriver	
Plumber tape	
Power drill	
Silicone	

9. PARTS BREAKDOWN

