
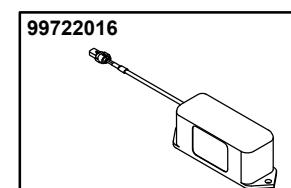
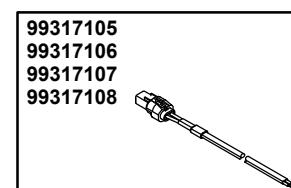
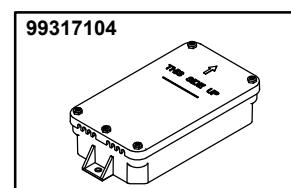
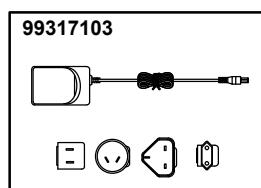


**KOHLER**

## Touchless Single Hole Bathroom Faucet

K-13469

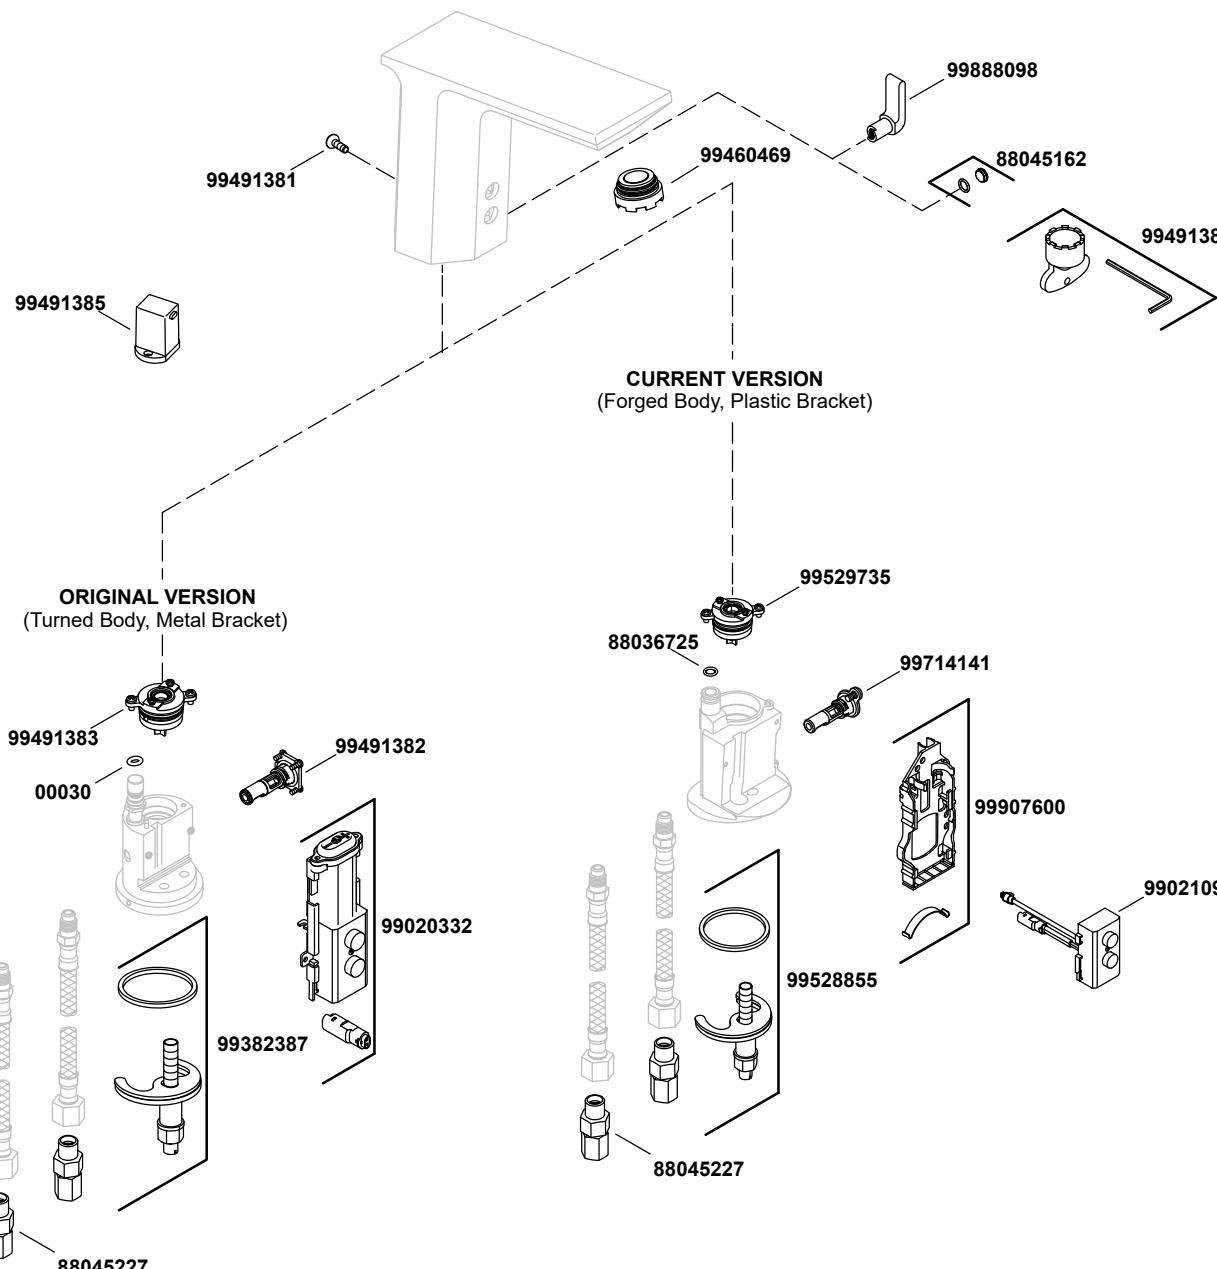

Troubleshooting			Troubleshooting (cont.)		
Symptoms	Probable Causes	Recommended Action	Symptoms	Probable Causes	Recommended Action
1. No water flow.	A. Filter is plugged. B. Sensor eyes are dirty.	A. Clean or replace the filter. B. Wipe the sensor eyes with a damp soft cloth. Wipe dry with a dry soft cloth.	3. Constant water flow.	A. Filter is plugged. B. Diaphragm seal is damaged or dirty. C. Solenoid is not working.	A. Clean or replace the filter. B. If the diaphragm is cut or torn, order a new diaphragm assembly. Clean or replace the diaphragm. C. Order and install a new solenoid assembly.
2. Low flow.	C. Water not turned on. D. Incorrect installation. E. The aerator is plugged. F. Sensor eyes are scratched. G. A flex hose is kinked. H. Power was interrupted. I. Battery life expired. J. Bleed hole in diaphragm is plugged or debris exists on the seal. K. Solenoid is not working.	A. Verify that the water supply is turned on and that pressure is at least 20 psi (137 kPa). D. Verify that the faucet is mounted as instructed in the installation guide. Ensure that the sensor eyes are above the rim of the sink. Refer to the installation instructions. E. Remove and clean the aerator. For calcium/mineral deposits, soak the plastic insert in a 50:50 mix of water and vinegar. Soak only the plastic insert. F. Replace the sensor assembly. G. Check the flex hoses to make certain they are not kinked. If a flex hose is kinked, disconnect it, straighten, and reconnect. H. Wait 2 minutes after power is restored as the sensor cycles through the automatic sensing distance. I. Replace the power supply. J. Clean or replace the diaphragm. K. Order a new solenoid service kit.	4. Sporadic water flow.	A. The faucet is angled incorrectly to deck or misaligned with user area. B. The wires are pinched or damaged.	A. Verify that the faucet is mounted according to the installation directions. Ensure that the faucet is installed in a position that is above the rim of the sink. B. Remove the spout and verify that the wires are tucked inside the spout before reassembling.
			5. Sensor flashes once approximately every 2 seconds. The product continues to operate.	A. Low voltage.	A. Replace the power supply.
			6. Sensor flashes once approximately every 2 seconds. The product does not operate.	A. Low voltage.	A. Replace the power supply.



BEST PLUMBING SPECIALTIES

800-448-6710 | [www.bestplumbingspecialties.com](http://www.bestplumbingspecialties.com)